

**ActiCam** ACAM518K

For more information see the extended manual online: [neds.akti.com/acti](#)

**Intended use**

This is a small and lightweight action camera that captures 4K Ultra HD images and video.

Use the product to take photos and videos to manage your photos, videos and settings. This product is intended for indoor and outdoor use.

This product is intended as a recording device.

Never use the product for any purpose that may compromise for safety, warranty and proper functioning.

This product can be used by children aged from 16 years and above and persons with reduced physical abilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the product's limitations, even when being used with parental supervision. The correct use of the product is intended for children aged from 16 years and above. Cleaning and user maintenance shall not be done by children without supervision.

**Recording time**

The approximate recording times in an indication of how long video length can be saved on the microSD card, depending on the video quality.

MicroSD card	720p, 120 fps	1080p, 30 fps	4K, 30 fps
16 GB	95 minutes	140 minutes	90 minutes
32 GB	190 minutes	270 minutes	170 minutes
64 GB	340 minutes	520 minutes	320 minutes

**Main parts (Image A)**

- 1. On/Off button
- 2. Power/Mode button
- 3. Camera lens
- 4. Micro-USB port
- 5. Back display
- 6. Charging indicator LED
- 7. MicroSD HDMI port
- 8. Battery cover

**Additional parts (not shown in illustration)**

- 1. Battery
- 2. Waterproof housing
- 3. Mounting accessories (x3)
- 4. Bandages
- 5. USB-C cable
- 6. Waterproofing Gehäuse
- 7. Befestigungszubehör (x3)
- 8. Bandagen
- 9. USB-C-Kabel
- 10. Wasserdichtes Gehäuse
- 11. Halterung
- 12. Objektivluch

**Safety instructions**

**WARNING**

Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.

Never use the product described in this document for any purpose that may compromise for safety, warranty and proper functioning.

- Do not use the product if there is any damage or defective parts. Replace a damaged or defective part immediately.
- Do not use the product to avoid bumping.
- Do not expose the product to water or moisture.
- Do not expose batteries to heat or fire. Avoid storing in direct sunlight.
- In the event of a fall looking to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not use the product in an empty battery.
- Seal medical advice immediately if a cell or a battery has been swallowed.
- Battery usage by children should be supervised.
- Waterproof housing should be used in accordance with the instructions from the Needs website.
- Observe the charging terminals on the battery and the product and ensure correct use.

**Insert or change memory card (Image B)**

A microSD card is not included in required to store pictures or videos. Insert the microSD card into the microSD card slot (A).

- Use a MicroSD card with a maximum of 64 GB storage capacity.
- Format the microSD card before use.
- Removing the microSD card will remove all files from the microSD card. Make sure to back up all files you want to keep before formatting the microSD card.

**Charging the battery (Image C)**

Charge the camera from your USB outlet with the supplied USB-C cable. The camera can be charged using the microUSB port. It takes approximately 3 hours.

**Attaching the product to the accessories**

- The product is not waterproof without the waterproof housing.
- The waterproof housing (A) can be fitted with the supplied mounting accessories to your clothing, action gear, helmet, etc.
- Make sure the attachment is secure.
- Always use the camera does not impede your movement, view or operation of your action gear.

**Switching on the product**

 
Hold the power button (A) for about 3 seconds until the status indicator LED (A) lights up. Press the OK button (A) to enter the menu.

Press and hold the down button (A) to switch between the front display (A) and back display (A).

**Switching between the modes**

Press the power / mode button (A) to switch between the modes of the product.

**Before first use**



**Video mode**

Press the power / mode button (A) to enter the video mode.

**Picture mode**

Press the power / mode button (A) to enter the picture mode.

**Slow motion mode**

Press the power / mode button (A) to enter the slow motion mode.

**Playback mode**

Press the power / mode button (A) to enter the playback mode.

**Setup mode**

Press the power / mode button (A) to enter the setup mode.

**Record pictures and video images**

In video mode, press the OK button (A) to start or stop recording a video. In picture mode, press the OK button (A) to take a picture.

**View pictures and video images**

Press the power / mode button (A) or down button (A) to go to the next or previous picture or video.

Press the OK button (A) to play and stop videos.

Press the power / mode button (A) to delete pictures or videos.

**Settings menu navigation**

- Press the OK button (A) in the setup mode to enter the settings menu.
- In the settings menu:
- Press the power / mode button (A) to select the menu tab.
- Press the up button (A) and the down button (A) to navigate between the options.
- Press the OK button (A) to select and confirm the desired option.
- Press the power / mode button (A) to return to the extended manual online.

**Transfer files to external device**

Connect the product to your device with the USB-C cable (A). Transfer the files you want to save to your device.

Alternatively, remove the microSD card from the microSD card slot (A) and insert the microSD card into a card reader that is connected to your device.

**Use with X-Port Pro App**

Use the X-Port Pro App on your mobile device to view images and videos, transfer them to your mobile device, take pictures, record videos, toggle picture and video modes and change settings.

- The app works best with iPhone or Android version 8.0 and up.
- For more information about the app, consult the extended manual online.

- Switch on the product.
- Press and hold the up button (A) for 3 seconds to activate Wi-Fi.
- Search for the product.
- Alternatively:
- Press the power / mode button (A) to switch between the modes of the product.
- Press the OK button (A) in the setup mode to enter the settings menu.
- Press the power / mode button (A) to select Wi-Fi mode.
- Press the OK button (A) to activate Wi-Fi.
- Press and hold the X-Port Pro app Select Wi-Fi network X-Port Pro. Enter password 12345678 to connect.

**Connection to external device**

Once the connection is established, you see the live view of the camera. You now can control the camera with the app.

- Wi-Fi has to be switched on to use the product with the X-Port Pro app.
- Press the record button in the bottom to start or stop recording a video.
- Press the camera button to take a picture.
- Tap the slow motion button to control a slow motion video.
- Tap the media gallery button in the bottom left to enter, delete or download pictures and videos to your mobile device.

**View pictures and video images on external device**

Use the product to view pictures and video images on a TV or monitor without transferring any files.

- Press the HDMI cable into the MicroHDMI port (A).
- The HDMI cable is not included.
- Plug the other end of the HDMI cable into the external device.

**Switching off the product**

Press the power / mode button (A) for 3 seconds to switch off the product. In some cases, remove the battery from the product when not in use.

**Replacing the battery (Image D)**

- Open the battery compartment.
- Remove the empty or damaged battery.
- Check the battery for the battery compartment.
- Only purchase the appropriate replacement battery from the Needs website.
- Close the battery cover (A).

**Disposal**

This product is designed for separate collection at an appropriate collection point.

- Do not dispose of the product with household waste.
- For more information, contact the retailer or the local authority responsible for the waste management.

**Declaration of Conformity**

We, Needs BV, declare as manufacturer that the product ACAM518K from our brand Needs®, produced in China, has been tested according to all relevant CE standards and regulations. This data sheet has been prepared accordingly. This includes, but is not limited to the RED 2014/53/EU regulation.

**The complete Declaration of Conformity and the safety datasheet (if applicable) can be found and downloaded via:**

[neds.com/KCM518Ksupport](#)

**Ansahn von Bildern und Videos auf einem externen Gerät**

Verbinden Sie das HDMI-Kabel an ein Entfernungsgerät, um die Bilder und Videos zu übertragen.

- Stecken Sie ein HDMI-Kabel in den Micro-HDMI-Anschluss (A).
- Das Datenblatt muss bei der Anschlussverbindung mitgeliefert werden.
- Verbinden Sie das andere Ende des HDMI-Kabels mit dem externen Gerät.

**Auswechseln des Akkus (Abbildung D)**

Halten Sie die Ein/Aus-/Modus-Taste (A) 3 Sekunden lang gedrückt, um ein Produkt wieder einzuschalten.

- Öffnen Sie die Batterie nach Möglichkeit aus dem Produkt heraus, wenn Sie nicht verwenden.

**Austauschen der Batterie (Abbildung D)**

- Öffnen Sie die Batterieabdeckung (A).
- Entfernen Sie die alte, entladene Batterie.
- Setzen Sie die neue Batterie in das Batteriefach.
- Kaufen Sie nur die passende Ersatzbatterie von der Needs Website.
- Schließen Sie die Batterieabdeckung (A).

**Entsorgung**

Dieses Produkt muss an einer entsprechenden Sammelstelle für Entsorgung abgegeben werden. Entsorgen Sie das Produkt nicht mit dem Haushaltsmüll.

- Weitere Informationen erhalten Sie beim Verkäufer oder bei der Abfallwirtschaftsunternehmen örtlichen Behörde.

**Konformitätserklärung**

Wir, Needs BV, erklären als Hersteller, dass das Produkt ACAM518K unserer Marke Needs®, produziert in China, nach allen geltenden CE-Standards und Vorschriften getestet wurde und diese Tests erfolgreich bestanden hat. Dies gilt unter anderem auch für die Richtlinie RED 2014/53/EU.

**ActiCam** ACAM518K

For more information see the extended manual online: [neds.akti.com/acti](#)

**Intended use**

This is a small and lightweight action camera that captures 4K Ultra HD images and video.

Use the product to take photos and videos to manage your photos, videos and settings. This product is intended for indoor and outdoor use.

This product is intended as a recording device.

Never use the product for any purpose that may compromise for safety, warranty and proper functioning.

This product can be used by children aged from 16 years and above and persons with reduced physical abilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the product's limitations, even when being used with parental supervision. The correct use of the product is intended for children aged from 16 years and above. Cleaning and user maintenance shall not be done by children without supervision.

**Recording time**

The approximate recording times in an indication of how long video length can be saved on the microSD card, depending on the video quality.

MicroSD card	720p, 120 fps	1080p, 30 fps	4K, 30 fps
16 GB	95 minutes	140 minutes	90 minutes
32 GB	190 minutes	270 minutes	170 minutes
64 GB	340 minutes	520 minutes	320 minutes

**Main parts (Image A)**

- 1. On/Off button
- 2. Power/Mode button
- 3. Camera lens
- 4. Micro-USB port
- 5. Back display
- 6. Charging indicator LED
- 7. MicroSD HDMI port
- 8. Battery cover

**Additional parts (not shown in illustration)**

- 1. Battery
- 2. Waterproof housing
- 3. Mounting accessories (x3)
- 4. Bandages
- 5. USB-C cable
- 6. Waterproofing Gehäuse
- 7. Befestigungszubehör (x3)
- 8. Bandagen
- 9. USB-C-Kabel
- 10. Wasserdichtes Gehäuse
- 11. Halterung
- 12. Objektivluch

**Safety instructions**

**WARNING**

Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.

Never use the product described in this document for any purpose that may compromise for safety, warranty and proper functioning.

- Do not use the product if there is any damage or defective parts. Replace a damaged or defective part immediately.
- Do not use the product to avoid bumping.
- Do not expose the product to water or moisture.
- Do not expose batteries to heat or fire. Avoid storing in direct sunlight.
- In the event of a fall looking to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not use the product in an empty battery.
- Seal medical advice immediately if a cell or a battery has been swallowed.
- Battery usage by children should be supervised.
- Waterproof housing should be used in accordance with the instructions from the Needs website.
- Observe the charging terminals on the battery and the product and ensure correct use.

**Insert or change memory card (Image B)**

A microSD card is not included in required to store pictures or videos. Insert the microSD card into the microSD card slot (A).

- Use a MicroSD card with a maximum of 64 GB storage capacity.
- Format the microSD card before use.
- Removing the microSD card will remove all files from the microSD card. Make sure to back up all files you want to keep before formatting the microSD card.

**Charging the battery (Image C)**

Charge the camera from your USB outlet with the supplied USB-C cable. The camera can be charged using the microUSB port. It takes approximately 3 hours.

**Attaching the product to the accessories**

- The product is not waterproof without the waterproof housing.
- The waterproof housing (A) can be fitted with the supplied mounting accessories to your clothing, action gear, helmet, etc.
- Make sure the attachment is secure.
- Always use the camera does not impede your movement, view or operation of your action gear.

**Switching on the product**


Hold the power button (A) for about 3 seconds until the status indicator LED (A) lights up. Press the OK button (A) to enter the menu.

Press and hold the down button (A) to switch between the front display (A) and back display (A).

**Switching between the modes**

Press the power / mode button (A) to switch between the modes of the product.

**Before first use**



**Video mode**

Press the power / mode button (A) to enter the video mode.

**Picture mode**

Press the power / mode button (A) to enter the picture mode.

**Slow motion mode**

Press the power / mode button (A) to enter the slow motion mode.

**Playback mode**

Press the power / mode button (A) to enter the playback mode.

**Setup mode**

Press the power / mode button (A) to enter the setup mode.

**Record pictures and video images**

In video mode, press the OK button (A) to start or stop recording a video. In picture mode, press the OK button (A) to take a picture.

**View pictures and video images**

Press the power / mode button (A) or down button (A) to go to the next or previous picture or video.

Press the OK button (A) to play and stop videos.

Press the power / mode button (A) to delete pictures or videos.

**Settings menu navigation**

- Press the OK button (A) in the setup mode to enter the settings menu.
- In the settings menu:
- Press the power / mode button (A) to select the menu tab.
- Press the up button (A) and the down button (A) to navigate between the options.
- Press the OK button (A) to select and confirm the desired option.
- Press the power / mode button (A) to return to the extended manual online.

**Transfer files to external device**

Connect the product to your device with the USB-C cable (A). Transfer the files you want to save to your device.

Alternatively, remove the microSD card from the microSD card slot (A) and insert the microSD card into a card reader that is connected to your device.

**Use with X-Port Pro App**

Use the X-Port Pro App on your mobile device to view images and videos, transfer them to your mobile device, take pictures, record videos, toggle picture and video modes and change settings.

- The app works best with iPhone or Android version 8.0 and up.
- For more information about the app, consult the extended manual online.

- Switch on the product.
- Press and hold the up button (A) for 3 seconds to activate Wi-Fi.
- Search for the product.
- Alternatively:
- Press the power / mode button (A) to switch between the modes of the product.
- Press the OK button (A) in the setup mode to enter the settings menu.
- Press the power / mode button (A) to select Wi-Fi mode.
- Press the OK button (A) to activate Wi-Fi.
- Press and hold the X-Port Pro app Select Wi-Fi network X-Port Pro. Enter password 12345678 to connect.

**Connection to external device**

Once the connection is established, you see the live view of the camera. You now can control the camera with the app.

- Wi-Fi has to be switched on to use the product with the X-Port Pro app.
- Press the record button in the bottom to start or stop recording a video.
- Press the camera button to take a picture.
- Tap the slow motion button to control a slow motion video.
- Tap the media gallery button in the bottom left to enter, delete or download pictures and videos to your mobile device.

**View pictures and video images on external device**

Use the product to view pictures and video images on a TV or monitor without transferring any files.

- Press the HDMI cable into the MicroHDMI port (A).
- The HDMI cable is not included.
- Plug the other end of the HDMI cable into the external device.

**Switching off the product**

Press the power / mode button (A) for 3 seconds to switch off the product. In some cases, remove the battery from the product when not in use.

**Replacing the battery (Image D)**

- Open the battery compartment.
- Remove the empty or damaged battery.
- Check the battery for the battery compartment.
- Only purchase the appropriate replacement battery from the Needs website.
- Close the battery cover (A).

**Disposal**

This product is designed for separate collection at an appropriate collection point.

- Do not dispose of the product with household waste.
- For more information, contact the retailer or the local authority responsible for the waste management.

**Declaration of Conformity**

We, Needs BV, declare as manufacturer that the product ACAM518K from our brand Needs®, produced in China, has been tested according to all relevant CE standards and regulations. This data sheet has been prepared accordingly. This includes, but is not limited to the RED 2014/53/EU regulation.

**The complete Declaration of Conformity and the safety datasheet (if applicable) can be found and downloaded via:**

[neds.com/KCM518Ksupport](#)

**Ansahn von Bildern und Videos auf einem externen Gerät**

Verbinden Sie das HDMI-Kabel an ein Entfernungsgerät, um die Bilder und Videos zu übertragen.

- Stecken Sie ein HDMI-Kabel in den Micro-HDMI-Anschluss (A).
- Das Datenblatt muss bei der Anschlussverbindung mitgeliefert werden.
- Verbinden Sie das andere Ende des HDMI-Kabels mit dem externen Gerät.

**Auswechseln des Akkus (Abbildung D)**

Halten Sie die Ein/Aus-/Modus-Taste (A) 3 Sekunden lang gedrückt, um ein Produkt wieder einzuschalten.

- Öffnen Sie die Batterie nach Möglichkeit aus dem Produkt heraus, wenn Sie nicht verwenden.

**Austauschen der Batterie (Abbildung D)**

- Öffnen Sie die Batterieabdeckung (A).
- Entfernen Sie die alte, entladene Batterie.
- Setzen Sie die neue Batterie in das Batteriefach.
- Kaufen Sie nur die passende Ersatzbatterie von der Needs Website.
- Schließen Sie die Batterieabdeckung (A).

**Entsorgung**

Dieses Produkt muss an einer entsprechenden Sammelstelle für Entsorgung abgegeben werden. Entsorgen Sie das Produkt nicht mit dem Haushaltsmüll.

- Weitere Informationen erhalten Sie beim Verkäufer oder bei der Abfallwirtschaftsunternehmen örtlichen Behörde.

**Konformitätserklärung**

Wir, Needs BV, erklären als Hersteller, dass das Produkt ACAM518K unserer Marke Needs®, produziert in China, nach allen geltenden CE-Standards und Vorschriften getestet wurde und diese Tests erfolgreich bestanden hat. Dies gilt unter anderem auch für die Richtlinie RED 2014/53/EU.

**ActiCam** ACAM518K

For more information see the extended manual online: [neds.akti.com/acti](#)

**Intended use**

This is a small and lightweight action camera that captures 4K Ultra HD images and video.

Use the product to take photos and videos to manage your photos, videos and settings. This product is intended for indoor and outdoor use.

This product is intended as a recording device.

Never use the product for any purpose that may compromise for safety, warranty and proper functioning.

This product can be used by children aged from 16 years and above and persons with reduced physical abilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the product's limitations, even when being used with parental supervision. The correct use of the product is intended for children aged from 16 years and above. Cleaning and user maintenance shall not be done by children without supervision.

**Recording time**

The approximate recording times in an indication of how long video length can be saved on the microSD card, depending on the video quality.

MicroSD card	720p, 120 fps	1080p, 30 fps	4K, 30 fps
16 GB	95 minutes	140 minutes	90 minutes
32 GB	190 minutes	270 minutes	170 minutes
64 GB	340 minutes	520 minutes	320 minutes

**Main parts (Image A)**

- 1. On/Off button
- 2. Power/Mode button
- 3. Camera lens
- 4. Micro-USB port
- 5. Back display
- 6. Charging indicator LED
- 7. MicroSD HDMI port
- 8. Battery cover

**Additional parts (not shown in illustration)**

- 1. Battery
- 2. Waterproof housing
- 3. Mounting accessories (x3)
- 4. Bandages
- 5. USB-C cable
- 6. Waterproofing Gehäuse
- 7. Befestigungszubehör (x3)
- 8. Bandagen
- 9. USB-C-Kabel
- 10. Wasserdichtes Gehäuse
- 11. Halterung
- 12. Objektivluch

**Safety instructions**

**WARNING**

Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.

Never use the product described in this document for any purpose that may compromise for safety, warranty and proper functioning.

- Do not use the product if there is any damage or defective parts. Replace a damaged or defective part immediately.
- Do not use the product to avoid bumping.
- Do not expose the product to water or moisture.
- Do not expose batteries to heat or fire. Avoid storing in direct sunlight.
- In the event of a fall looking to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not use the product in an empty battery.
- Seal medical advice immediately if a cell or a battery has been swallowed.
- Battery usage by children should be supervised.
- Waterproof housing should be used in accordance with the instructions from the Needs website.
- Observe the charging terminals on the battery and the product and ensure correct use.

**Insert or change memory card (Image B)**

A microSD card is not included in required to store pictures or videos. Insert the microSD card into the microSD card slot (A).

- Use a MicroSD card with a maximum of 64 GB storage capacity.
- Format the microSD card before use.
- Removing the microSD card will remove all files from the microSD card. Make sure to back up all files you want to keep before formatting the microSD card.

**Charging the battery (Image C)**

Charge the camera from your USB outlet with the supplied USB-C cable. The camera can be charged using the microUSB port. It takes approximately 3 hours.

**Attaching the product to the accessories**

- The product is not waterproof without the waterproof housing.
- The waterproof housing (A) can be fitted with the supplied mounting accessories to your clothing, action gear, helmet, etc.
- Make sure the attachment is secure.
- Always use the camera does not impede your movement, view or operation of your action gear.

**Switching on the product**

Hold the power button (A) for about 3 seconds until the status indicator LED (A) lights up. Press the OK button (A) to enter the menu.

Press and hold the down button (A) to switch between the front display (A) and back display (A).

**Switching between the modes**

Press the power / mode button (A) to switch between the modes of the product.

**Before first use**



**Video mode**

Press the power / mode button (A) to enter the video mode.

**Picture mode**

Press the power / mode button (A) to enter the picture mode.

**Slow motion mode**

Press the power / mode button (A) to enter the slow motion mode.

**Playback mode**

Press the power / mode button (A) to enter the playback mode.

**Setup mode**

Press the power / mode button (A) to enter the setup mode.

**Record pictures and video images**

In video mode, press the OK button (A) to start or stop recording a video. In picture mode, press the OK button (A) to take a picture.

**View pictures and video images**

Press the power / mode button (A) or down button (A) to go to the next or previous picture or video.

Press the OK button (A) to play and stop videos.

Press the power / mode button (A) to delete pictures or videos.

**Settings menu navigation**

- Press the OK button (A) in the setup mode to enter the settings menu.
- In the settings menu:
- Press the power / mode button (A) to select the menu tab.
- Press the up button (A) and the down button (A) to navigate between the options.
- Press the OK button (A) to select and confirm the desired option.
- Press the power / mode button (A) to return to the extended manual online.

**Transfer files to external device**

Connect the product to your device with the USB-C cable (A). Transfer the files you want to save to your device.

Alternatively, remove the microSD card from the microSD card slot (A) and insert the microSD card into a card reader that is connected to your device.

**Use with X-Port Pro App**

Use the X-Port Pro App on your mobile device to view images and videos, transfer them to your mobile device, take pictures, record videos, toggle picture and video modes and change settings.

- The app works best with iPhone or Android version 8.0 and up.
- For more information about the app, consult the extended manual online.

- Switch on the product.
- Press and hold the up button (A) for 3 seconds to activate Wi-Fi.
- Search for the product.
- Alternatively:
- Press the power / mode button (A) to switch between the modes of the product.
- Press the OK button (A) in the setup mode to enter the settings menu.
- Press the power / mode button (A) to select Wi-Fi mode.
- Press the OK button (A) to activate Wi-Fi.
- Press and hold the X-Port Pro app Select Wi-Fi network X-Port Pro. Enter password 12345678 to connect.

**Connection to external device**

Once the connection is established, you see the live view of the camera. You now can control the camera with the app.

- Wi-Fi has to be switched on to use the product with the X-Port Pro app.
- Press the record button in the bottom to start or stop recording a video.
- Press the camera button to take a picture.
- Tap the slow motion button to control a slow motion video.
- Tap the media gallery button in the bottom left to enter, delete or download pictures and videos to your mobile device.

**View pictures and video images on external device**

Use the product to view pictures and video images on a TV or monitor without transferring any files.

- Press the HDMI cable into the MicroHDMI port (A).
- The HDMI cable is not included.
- Plug the other end of the HDMI cable into the external device.

**Switching off the product**

Press the power / mode button (A) for 3 seconds to switch off the product. In some cases, remove the battery from the product when not in use.

**Replacing the battery (Image D)**

- Open the battery compartment.
- Remove the empty or damaged battery.
- Check the battery for the battery compartment.
- Only purchase the appropriate replacement battery from the Needs website.
- Close the battery cover (A).

**Disposal**

This product is designed for separate collection at an appropriate collection point.

- Do not dispose of the product with household waste.
- For more information, contact the retailer or the local authority responsible for the waste management.

**Declaration of Conformity**

We, Needs BV, declare as manufacturer that the product ACAM518K from our brand Needs®, produced in China, has been tested according to all relevant CE standards and regulations. This data sheet has been prepared accordingly. This includes, but is not limited to the RED 2014/53/EU regulation.

**The complete Declaration of Conformity and the safety datasheet (if applicable) can be found and downloaded via:**

[neds.com/KCM518Ksupport](#)

**Ansahn von Bildern und Videos auf einem externen Gerät**

Verbinden Sie das HDMI-Kabel an ein Entfernungsgerät, um die Bilder und Videos zu übertragen.

- Stecken Sie ein HDMI-Kabel in den Micro-HDMI-Anschluss (A).
- Das Datenblatt muss bei der Anschlussverbindung mitgeliefert werden.
- Verbinden Sie das andere Ende des HDMI-Kabels mit dem externen Gerät.

**Auswechseln des Akkus (Abbildung D)**

Halten Sie die Ein/Aus-/Modus-Taste (A) 3 Sekunden lang gedrückt, um ein Produkt wieder einzuschalten.

- Öffnen Sie die Batterie nach Möglichkeit aus dem Produkt heraus, wenn Sie nicht verwenden.

**Austauschen der Batterie (Abbildung D)**

- Öffnen Sie die Batterieabdeckung (A).
- Entfernen Sie die alte, entladene Batterie.
- Setzen Sie die neue Batterie in das Batteriefach.
- Kaufen Sie nur die passende Ersatzbatterie von der Needs Website.
- Schließen Sie die Batterieabdeckung (A).

**Entsorgung**

Dieses Produkt muss an einer entsprechenden Sammelstelle für Entsorgung abgegeben werden. Entsorgen Sie das Produkt nicht mit dem Haushaltsmüll.

- Weitere Informationen erhalten Sie beim Verkäufer oder bei der Abfallwirtschaftsunternehmen örtlichen Behörde.

**Konformitätserklärung**

Wir, Needs BV, erklären als Hersteller, dass das Produkt ACAM518K unserer Marke Needs®, produziert in China, nach allen geltenden CE-Standards und Vorschriften getestet wurde und diese Tests erfolgreich bestanden hat. Dies gilt unter anderem auch für die Richtlinie RED 2014/53/EU.

**ActiCam** ACAM518K

For more information see the extended manual online: [neds.akti.com/acti](#)

**Intended use**

This is a small and lightweight action camera that captures 4K Ultra HD images and video.

Use the product to take photos and videos to manage your photos, videos and settings. This product is intended for indoor and outdoor use.

This product is intended as a recording device.

Never use the product for any purpose that may compromise for safety, warranty and proper functioning.

This product can be used by children aged from 16 years and above and persons with reduced physical abilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the product's limitations, even when being used with parental supervision. The correct use of the product is intended for children aged from 16 years and above. Cleaning and user maintenance shall not be done by children without supervision.

**Recording time**

The approximate recording times in an indication of how long video length can be saved on the microSD card, depending on the video quality.

MicroSD card	720p, 120 fps	1080p, 30 fps	4K, 30 fps
16 GB	95 minutes	140 minutes	90 minutes
32 GB	190 minutes	270 minutes	170 minutes
64 GB	340 minutes	520 minutes	320 minutes

**Main parts (Image A)**

- 1. On/Off button
- 2. Power/Mode button
- 3. Camera lens
- 4. Micro-USB port
- 5. Back display
- 6. Charging indicator LED
- 7. MicroSD HDMI port
- 8. Battery cover

**Additional parts (not shown in illustration)**

- 1. Battery
- 2. Waterproof housing
- 3. Mounting accessories (x3)
- 4. Bandages
- 5. USB-C cable
- 6. Waterproofing Gehäuse
- 7. Befestigungszubehör (x3)
- 8. Bandagen
- 9. USB-C-Kabel
- 10. Wasserdichtes Gehäuse
- 11. Halterung
- 12. Objektivluch

**Safety instructions**

**WARNING**

Ensure you have fully read and understood the instructions in this document before you install or use the product. Keep the packaging and this document for future reference.

Never use the product described in this document for any purpose that may compromise

