



**Nomadelic**

English user manual for:

# Nomadelic Wireless Open-ear Headphones Solo 330 Sport

---

Item: 65788

This user manual is designed for accessibility  
and screen reader compatibility.





For safe use and maximum performance, make sure to read the full instruction manual before using the product. Keep the manual for future reference.

We reserve the right to correct any errors in text or images, and any necessary changes made to technical data. In the event of technical problems or other questions, please contact our Customer Services at [www.kjell.com/kundservice](http://www.kjell.com/kundservice).

## Safety information

- The headphones contain a rechargeable Lithium-ion battery, and the battery cannot be replaced.
- Do not open or disassemble the product.




To prevent possible hearing damage, do not listen at high volume levels for long periods.

## Recommended power adapter

To ensure optimal and safe performance, use a CE-certified adapter with these specifications:

- Minimum charging power 0.1 watt.
- Maximum charging power 0.5 watt (for full speed).

Only use adapters that meet these specifications to avoid performance issues or safety risks.

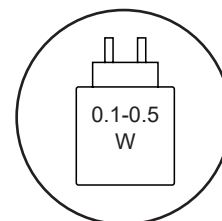

## Symbol descriptions



WEEE – Waste Electrical and Electronic Equipment.

This symbol indicates that the product must not be disposed of with household waste within the EU. To protect the environment and human health from potential risks associated with improper disposal, the product should be recycled. Please take the product to an approved e-waste collection point or contact your retailer for information on responsible disposal and recycling.



This product is CE marked and complies with applicable EU directives, including the Radio Equipment Directive 2014/53/EU and RoHS (2015/863/EU, which updated 2011/65/EU).

## Simplified EU Declaration of Conformity


Kjell & Company hereby declares that this device is compliant with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Full text of the EU declaration of conformity is available at:

[www.kjell.com/65788](http://www.kjell.com/65788).

## Overview of the headphones

Illustration of the headphones with numbered callouts for rotation axis, speaker unit, USB-C charging port, multifunction touch pad, and LED indicator.

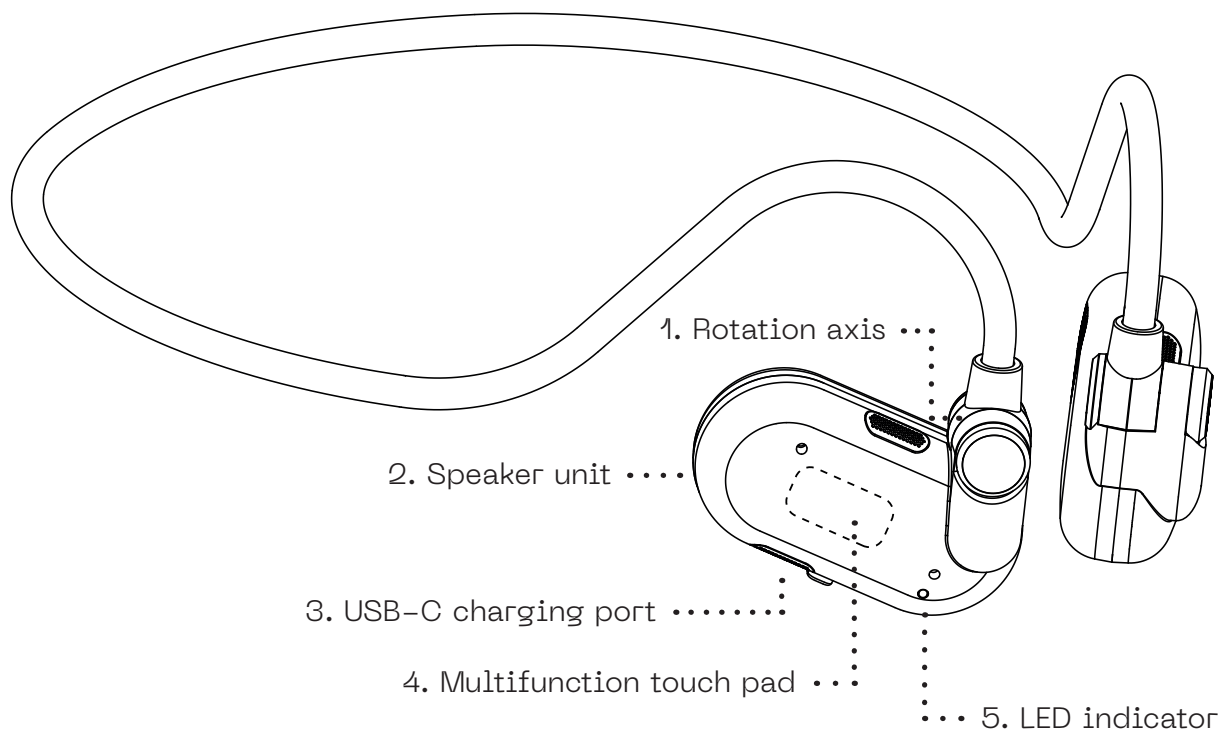

## Using the product

### Before first use

Charge the headphones fully before first use.

### Charging

- Lift the lid protecting the USB-C charging port.
- Connect the included USB-C cable between the charging port (3) and a USB charger (sold separately).
- Connect the USB charger to a wall outlet.
- The LED indicator (5) lights up red during charging and turns off when the headphones are fully charged.

A full charge takes up to 2 hours.

**Note:** The headphones cannot be used during charging.

### Power on and off the headphones

- Press and hold the multifunction touch pad (4) for 2 seconds to turn on the headphones. The LED indicator (5) flashes blue and red.
- Press and hold the multifunction touch pad (4) for 5 seconds to turn the headphones off.

**Note:** The headphones turn off automatically after 5 minutes if they are not connected to a Bluetooth source.

---

## Pairing with a smart device

- Make sure the headphones are turned off.
- Press and hold the multifunction touch pad (4) for 5 seconds. The LED indicator lights up and flashes blue and red alternately.
- Open the Bluetooth settings on your smart device. Search for nearby Bluetooth devices and choose **Nomadelic Solo 330 Sport** from the list.
- A sound is played in the headphones to notify you when pairing is successful.

The headphones automatically connect to the last paired smart device the next time they are powered on.

## Control music and calls

**Change the volume:** use your smart device.

**Answer calls:** press the multifunction touch pad (4).

**Play/pause music or hang up calls:** press the multifunction touch pad (4) twice.

**Next track:** press the multifunction touch pad (4) three times.

**Reject an incoming call or activate the voice assistant:** press and hold the multifunction touch pad (4) for 2 seconds.

## Troubleshooting

Problems with Bluetooth connection.

Make sure that the headphones' built-in battery is fully charged, that the headphones are turned on, and that the LED indicator lights up. If there are several Bluetooth smart devices around the headphones, deactivate Bluetooth on all smart devices and try again.

---

The sound is breaking up.

Make sure the distance between the headphones and the connected smart device does not exceed 10 meters. Make sure that there are no obstacles between the headphones and the device. Make sure that the headphones are charged properly.

---

Low sound from the headphones.

Make sure the open-ear sport headphones are placed around your neck, with the speaker units close to your ears. You can adjust the rotation axis (1) to a suitable angle so the sound is directed toward your ears. If you wear glasses, make sure they do not interfere with the fit of the headphones.

---

## Specifications

Bluetooth version:	6.0
Operation range:	10 meters
Battery:	50 mAh
Charging time:	About 2 hours
Charging input:	DC 5 volt, 50 mA
Charging power:	0.1–0.5 watt
Charging cable:	30 cm / USB-A to USB-C
Music playing time:	Up to 7 hours (50% volume)
Sensitivity:	100 +/-3 dB
Driver impedance:	24 ohms
Driver frequency range:	20 Hz–20 kHz
Size:	121 x 108 mm
Weight:	16 g
Wireless frequency:	2402–2480 MHz
Transmission power:	20 mW (max)
Included in the box:	Open-ear sport headphones, USB-A to USB-C charging cable (30 cm), quick guide

**For more information, go to:**

[www.nomadelic.com](http://www.nomadelic.com)

Or contact Customer Services via [www.kjell.com/kundservice](http://www.kjell.com/kundservice).

Kjell & Company

Box 50435

202 14 Malmö

Sweden